

# Instructions Adhesive

## Recommended tools:



Spirit level  
or plumb  
rule



Steel rule



Pencil



Knife

# 1

## Preparation of the surface

The surface should be clean and smooth. If the surface is porous, e.g. a filled wall or similar, you should first apply a primer. Old paint and wallpaper that is flaking or peeling must be removed. If there is significant variation in the colour of the wall, it is a good idea to apply a primer for best results.



## Hanging the wallpaper

Check the wallpaper before you start to ensure that you have all the panels you need and that these are intact and undamaged.

At the top of each panel (panel header) you will find information about the overall size of the wallpaper and a

# 2

panel number.

The panels are hung in numerical order from left to right. The panel header must always be at the top. It is important that the first panel be hung straight.




**Tip!** Mark vertical lines one panel width in on the wall and then hang the first panel so that it aligns with the markings.

Unpack panel number 1 and remove the backing paper from the back approx. 100 cm down from the top. Position and hang the panel. If it is not quite right, you can easily remove it and re-position it.

Now remove more of the backing paper as you apply the panel to the

The panels are numbered in the order they should be hung.

The panels are hung edge to edge.

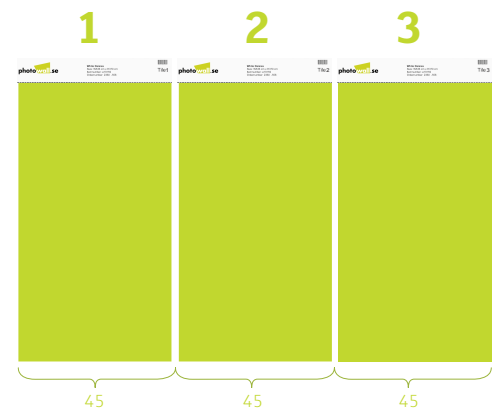

wall, smoothing it out in a downward direction as you go. Do not adjust the material any more than necessary and avoid stretching it. Once the entire panel is in place, cut off any excess wallpaper at floor and ceiling level to ensure a tidy finish.

The panels must be hung edge to edge, which means that they must not overlap.

Line up the next panel and be sure to check that the pattern matches up. Continue in the same way until you have hung all the panels.

Sit back and enjoy the new view!