

# HANGING INSTRUCTIONS

## Recommended tools:



Roller and tray



Bucket



paintbrush



Spirit level or plumb bob



Steel rule



sponge/rag



Pen



Knife

# 1

## Preparatory Work

The surface must be dry and clean. If the surface is porous, a plastered wall or chipboard for example, then it must be primed. Remove any loose paint or wallpaper. If the wall varies a great deal in colour it should be painted to achieve the best possible result.



### Mix the enclosed non-woven powder paste

Pour the powder slowly into 4 litres of cold water while mixing well. Mix again after approximately 3 minutes. Wait for a further 15 minutes and mix again before use. One bag is sufficient for 20 – 24 m<sup>2</sup>.

If you use ready-mixed paste, use non-woven paste or paste with a dry content <20%.

# 2

## Hanging

Check the wallpaper before hanging to ensure that no panels are missing, damaged or faulty.




The panels are numbered in the order in which they are to be hung. It is important that the first panel is straight.

**A tip** is to make a plumb line a panel's width in on the wall. The first panel can then be hung along the line.



Apply the paste directly to the wall using a roller or a paintbrush. It is important to apply paste to the whole surface. Any spots without paste will result in blisters on the wallpaper. Paste about the width of one section of wallpaper in advance and pay particular attention to pattern alignment.

**Note:** Avoid harsh folds as this may cause cracks in the wallpaper print.

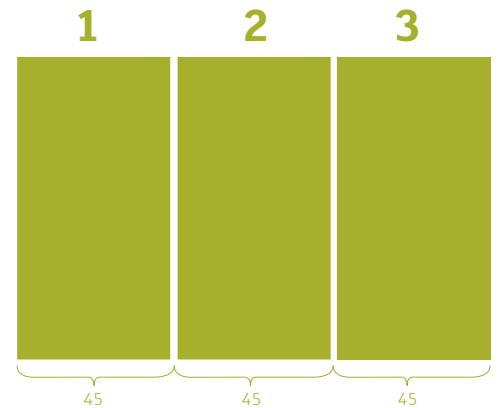

The panels are numbered in the order in which they are to be hung

The panels should be hung without any edges overlapping

The panels should be hung without any edges overlapping. Slide the joints together carefully and avoid getting paste on the front of the wallpaper as it might show up when it dries.



Smooth down the wallpaper from ceiling to floor after each panel has been hung using your hands or a Soft brush. Start from the centre and smooth down towards the edges. Try to remove as many bubbles as possible. Any small bubbles and creases will disappear as the wallpaper dries.

Remove any spots of paste on the front of the wallpaper using a damp rag or sponge, but do not rub.

When all the panels have been hung, remove any excess paste. Wait 24 hours to see the finished result.

Sit back and enjoy your new view!